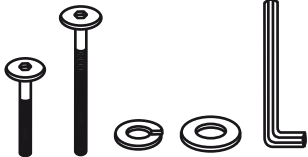
 

 



Assembly Instructions


CI-NP101S- -O

LADDERBACK SIDE CHAIR WITH CUSHION

PARTS LIST

PART NO	FIGURE	DESCRIPTION	Q'TY
CI-NP101S-01		Hardware Bag	1 Pce
CI-NP101S-02		Chair Back	1 Pce
CI-NP101S-03		Cushion	1 Pce
CI-NP101S-04		Seat Frame	1 Pce
CI-NP101S-05		Front Legs	2 Pcs

IMPORTANT NOTE : Please keep all hardware parts out of the reach of children.

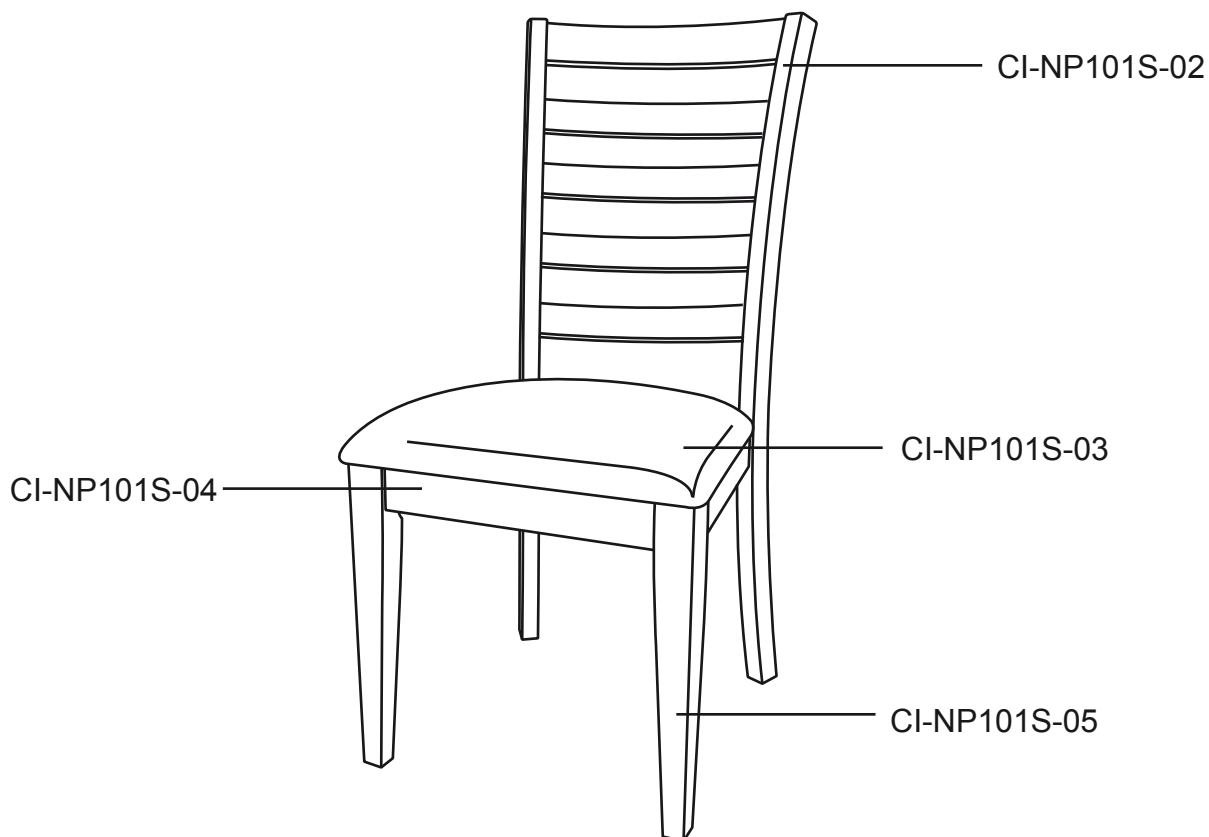

Assembly Instructions






CI-NP101S- -O

LADDERBACK SIDE CHAIR WITH CUSHION

Reminders :

Two people are needed for assembly.
Use only hardware supplied.
Do not over tighten bolts.
This item may require periodic tightening.


HARDWARE PARTS :

				
(Short) JCBC Bolt 2 pcs	(Long) JCBC Bolt 8 pcs	Lock Washer 10 pcs	Flat Washer 10 pcs	Allen Key 1 pce

ASSEMBLY:


1. Position the chair back on a soft surface such as a carpet. Place the Box system assembly (Cushion is pre-attached to the seat frame in assembly) on to the middle rail of the chair back with the dowel fully inserted into the pre-drilled hole.
 - 1.1 Insert **JCBC Bolt (Long)** through a **Lock Washer** and a **Flat Washer** into the pre-drilled holes on the apron frame at rear corners.
 - 1.2. Insert the **JCBC Bolt (Short)** through a **Lock Washer** and a **Flat Washer** into the pre-drilled holes on the apron frame at rear rail.
2. Place the front leg to the corner block, insert the **JCBC Bolt (Long)** through a **Lock Washer**, a **Flat Washer** and the pre-drilled holes of corner block into the pre-drilled holes on the front leg, tighten the **JCBC Bolt** with **Allen Key** provided.

STEP 1

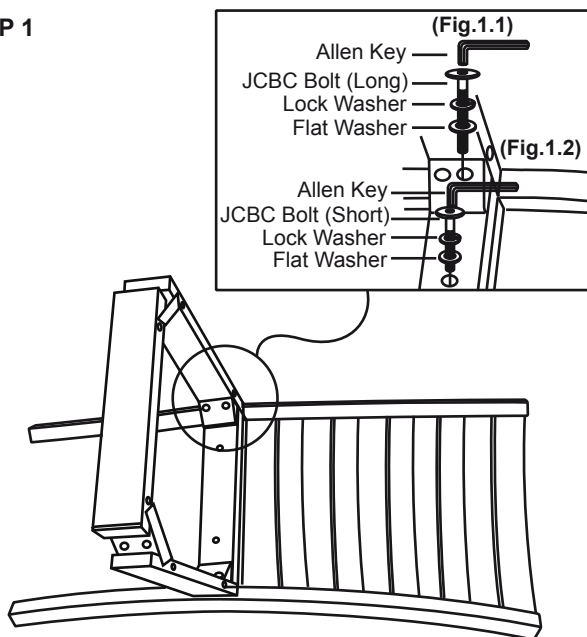


STEP 2

Assemble front leg as shown.

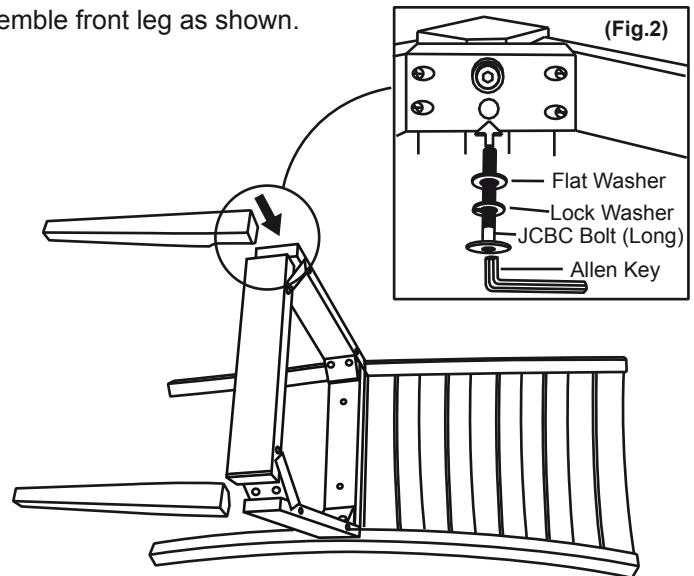

STEP 3

Turn the chair upright. Check its balance and tighten all screws and bolts to complete the assembly.

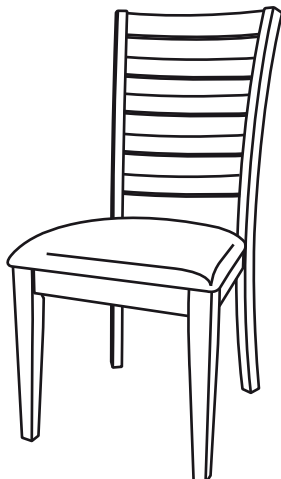

IMPORTANT NOTE :

~ Please keep all hardware out of the reach of children.

CARE INSTRUCTION

~ Be sure to use the same type of polish consistently.
Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchanged.
~ Spray your furniture surface evenly. Wipe in a circular motion with a soft clean cloth.