Assembly Instructions


T2-VT100C--G,T2-SF100C--C,T2-AP100C--G

COFFEE TABLE WITH 2 DRAWERS

PARTS LIST

PART NO	FIGURE	DESCRIPTION	QTY
T2-VT100C-01, T2-SF100C-01, T2-AP100C-01		Hardware Bag	1 pce
T2-VT100C-13, T2-SF100C-13, T2-AP100C-13		Table Top	1 pce
T2-VT100C-07, T2-SF100C-07, T2-AP100C-07		Legs	4 pcs
T2-VT100C-22, T2-SF100C-22, T2-AP100C-22		Fixed Shelf	1 pce

IMPORTANT NOTE : Please keep all hardware parts out of the reach of children.

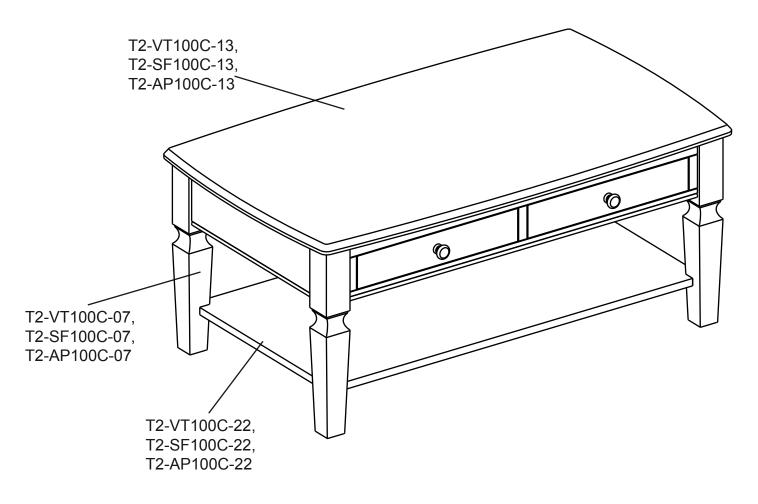

Assembly Instructions

 
T2-VT100--G,T2-SF100C--C,T2-AP100C--G

COFFEE TABLE WITH 2 DRAWERS

Reminders :

Two people are needed for assembly. Use only hardware supplied. Do not over tighten bolts. This item may require periodic tightening.


HARDWARE PART :



ASSEMBLY :


STEP 1

Pull out the Drawer Box as shown and Turn the Table Top upside down on a protective surface such as carpet or other soft material. Use **Flat Washer**, **Lock Washer**, **Hex Bolt** and **Wrench**, to attach three legs randomly to the table top, do not fully tighten yet.

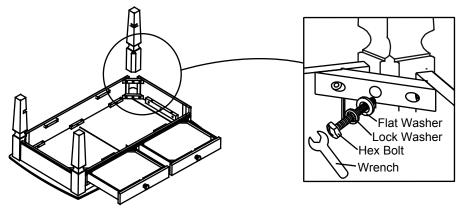

STEP 2

Insert the Fixed Shelf to three legs, insert the last leg to the corner of apron frame and Fixed Shelf. Then tighten with **Flat Washer**, **Lock Washer** and **Hex Bolt** using the **Wrench** provided. And fix the Fixed Shelf by insert and tighten the Pan Head Screw using the screw-driver (Not provided).

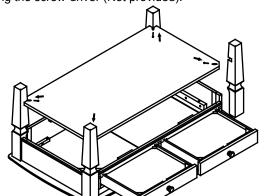

STEP 3

Check its balance and tighten all bolts to complete the assembly.

