## **Assembly Instructions**


T2-VT100S--G,T2-SF100S--C

SOFA TABLE WITH 2 DRAWERS

### PARTS LIST

PART NO	FIGURE	DESCRIPTION	QTY
T2-VT100S-01, T2-SF100S-01		Hardware Bag	1 pce
T2-VT100S-13, T2-SF100S-13		Table Top	1 pce
T2-VT100S-07, T2-SF100S-07		Legs	4 pcs
T2-VT100S-22, T2-SF100S-22		Fixed Shelf	1 pce

**IMPORTANT NOTE :** Please keep all hardware parts out of the reach of children.

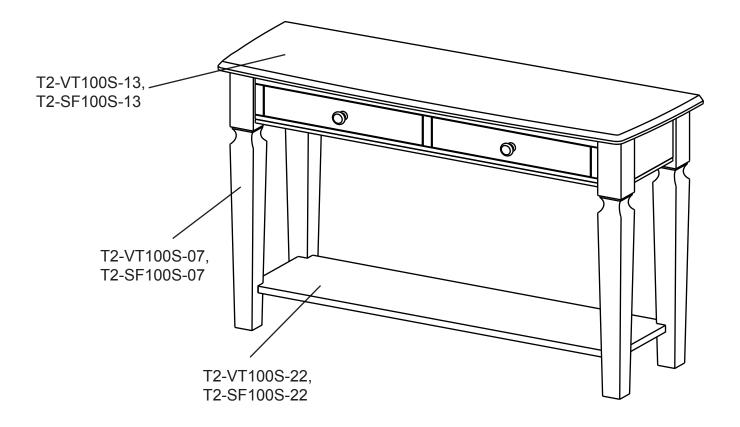


# **Assembly Instructions**

T2-VT100S--G,T2-SF100S--C SOFA TABLE WITH 2 DRAWERS

#### Reminders :

Two people are needed for assembly. Use only hardware supplied. Do not over tighten bolts. This item may require periodic tightening.

 
#### HARDWARE PART :



#### ASSEMBLY :


#### STEP 1

Pull out the Drawer Box as shown and Turn the Table Top upside down on a protective surface such as carpet or other soft material. Use **Flat Washer**, **Lock Washer**, **Hex Bolt** and **Wrench**, to attach three legs randomly to the table top, do not fully tighten yet. Insert the fixed shelf into the legs as shown in the diagram.

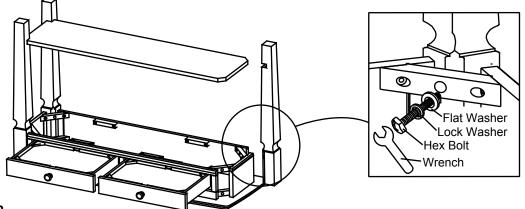

#### STEP 2

Insert the Fixed Shelf into three legs, insert the last leg to the corner of apron frame and bottom Fixed Shelf. Then tighten with **Flat Washer**, **Lock Washer** and **Hex Bolt** using the **Wrench** provided. And fix the Fixed shelf by insert and tighten the Pan Head Screw using the screw-driver (Not provided).

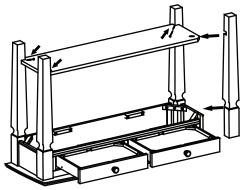

#### STEP 3

Check its balance and tighten all bolts to complete the assembly.

