 


ALEXIS OPEN ENTERTAINMENT UNIT

ASSEMBLY INSTRUCTION

Pg.1/4

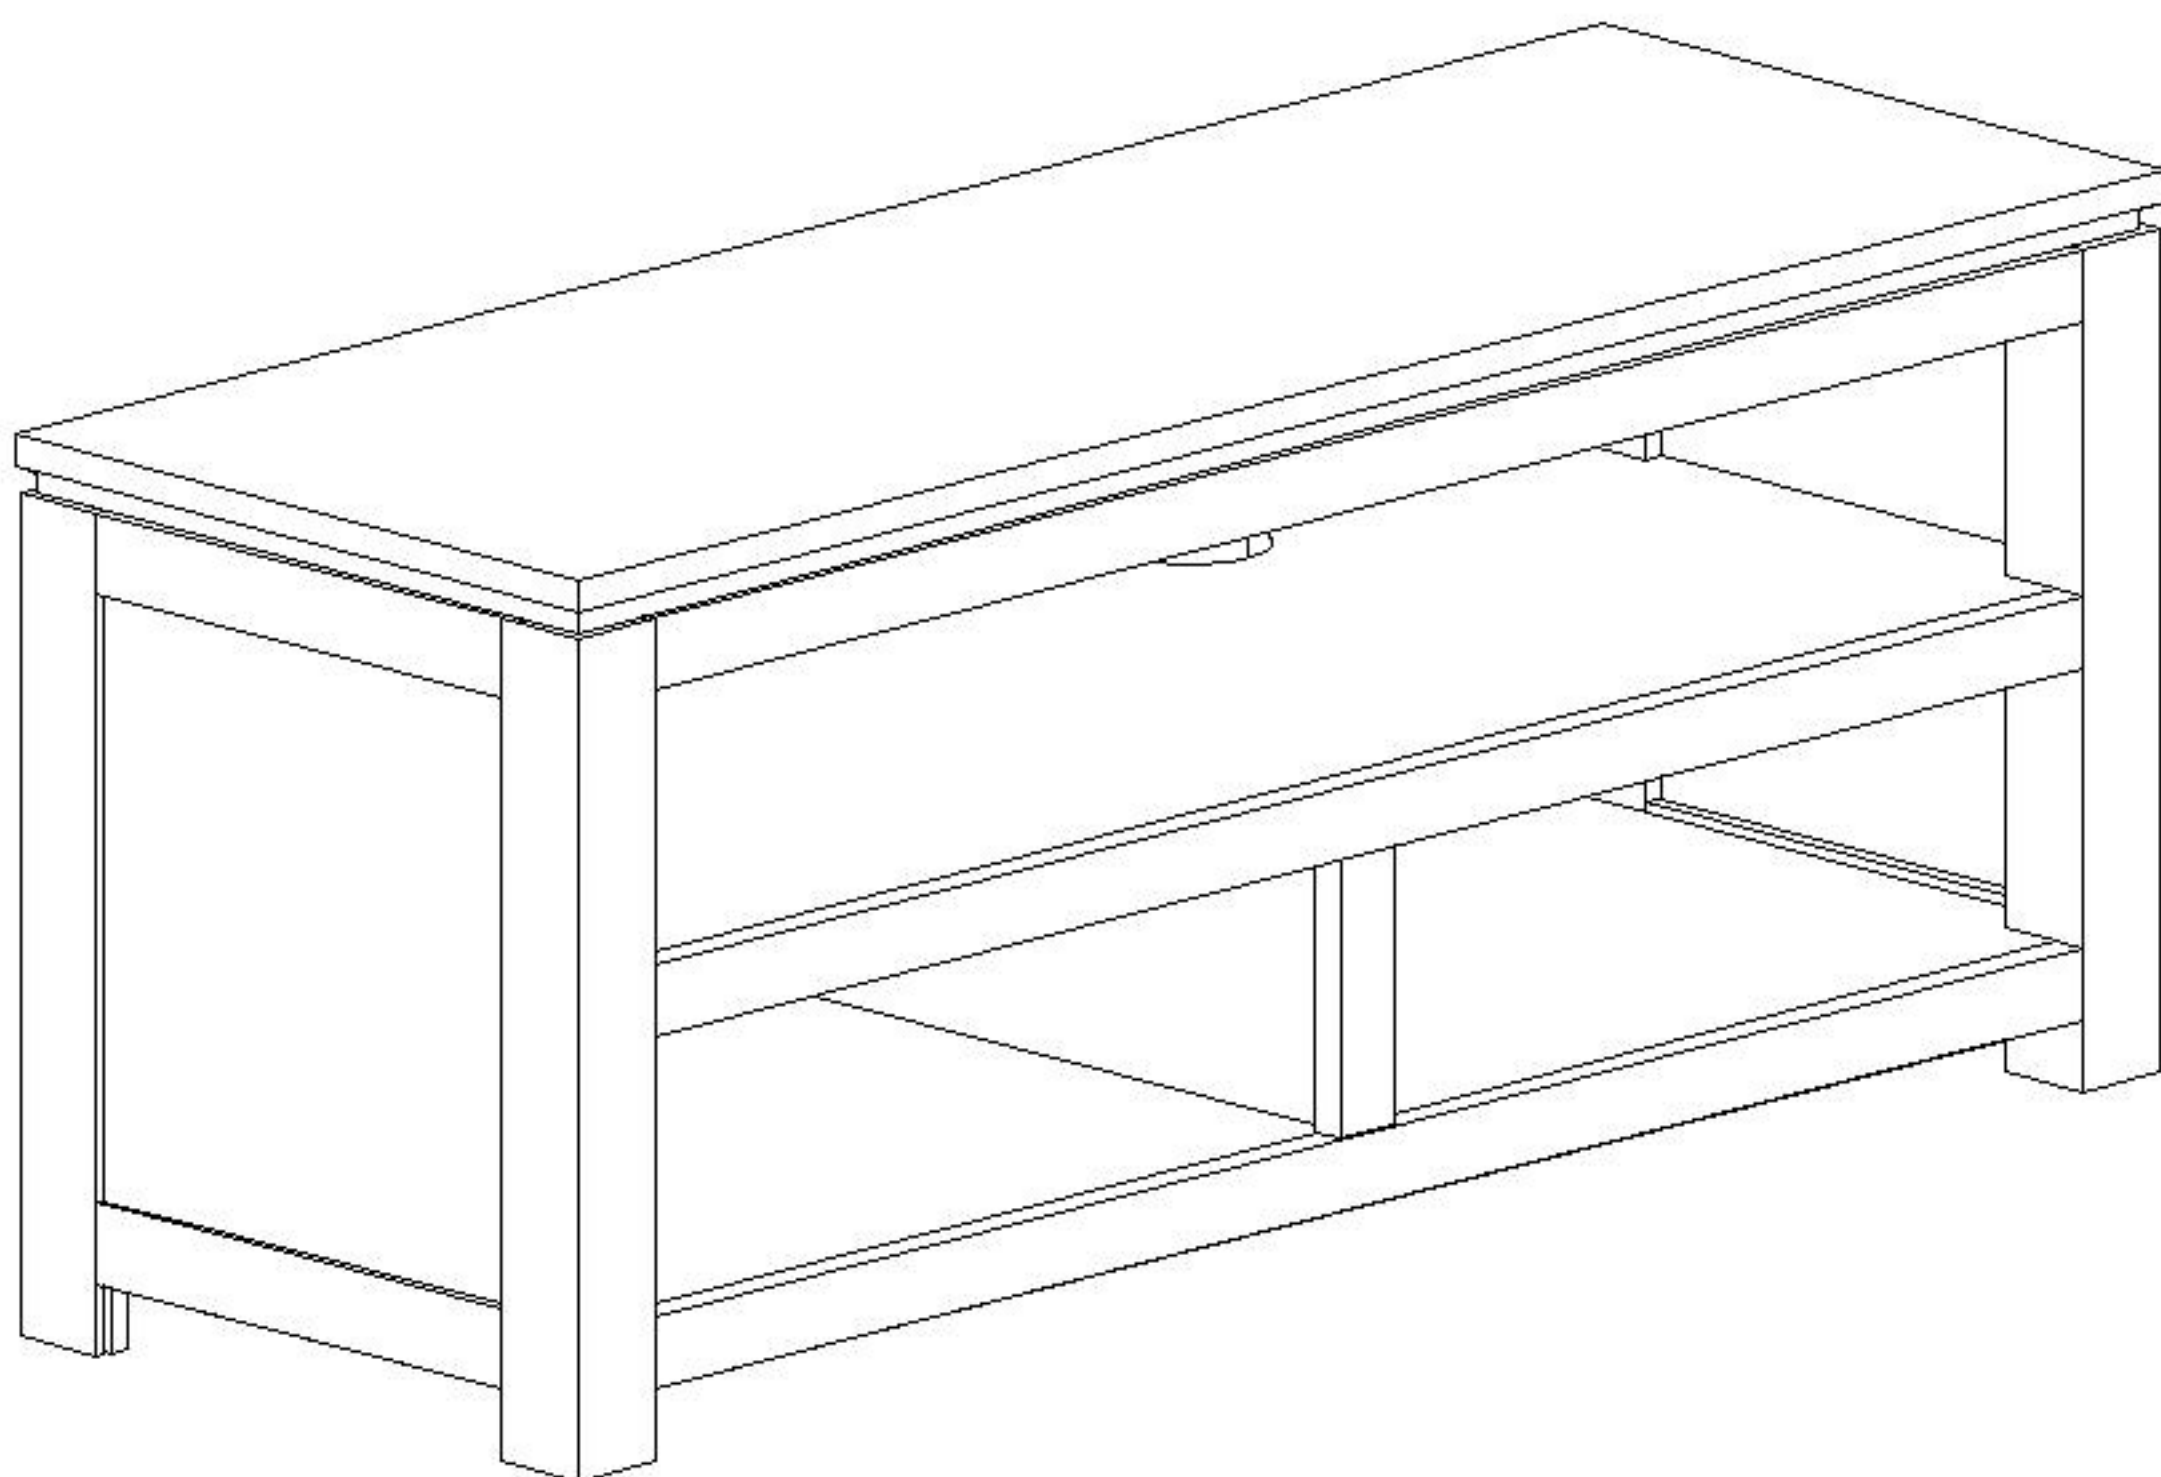

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton box during shipment.

IMPORTANT

Please go through this assembly instruction before starting. Kindly follow the sequence listed to assure fast, easy and correct assembly. It is recommended to have 2 adults available to build this unit.

TOOLS REQUIRED

A standard Philips Head Screwdriver, a 4mm Hex Wrench and a Rubber Mallet (to tap in wooden dowels) are required.

 
CARE & MAINTENANCE

Wipe clean with soft cloth and furniture polish.


MADE IN MALAYSIA

ALEXIS OPEN ENTERTAINMENT UNIT
ASSEMBLY INSTRUCTION


PARTS LIST

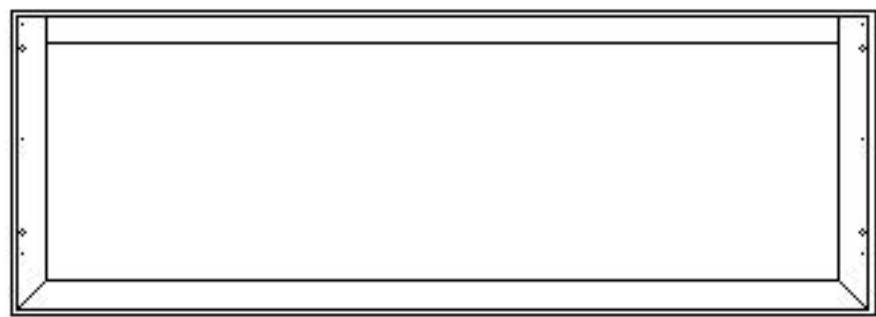

 
(A)
Top Panel - 1 pc

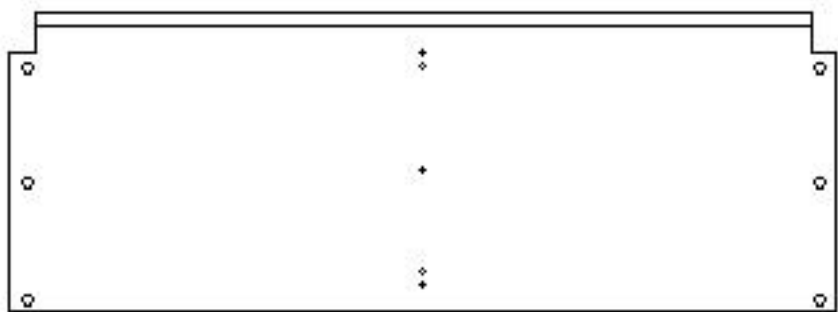

 (B)
Bottom Panel - 1 pc

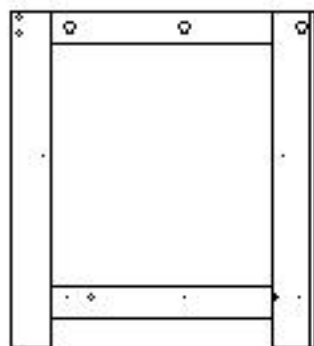

 
(C)
Side Panel (Left) - 1 pc

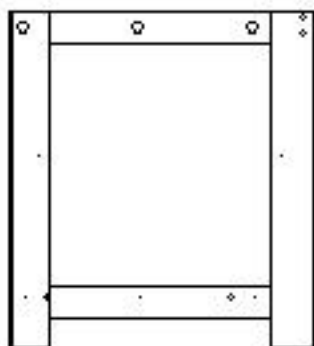


(D)
Side Panel (Right) - 1 pc



 
(E)
Fixed Shelf - 1 pc

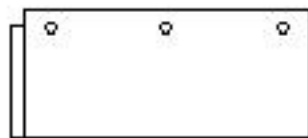

 
(F)
Division - 1 pc



 (G)
Top Rail - 1 pc



 (H)
Support Leg - 1 pc

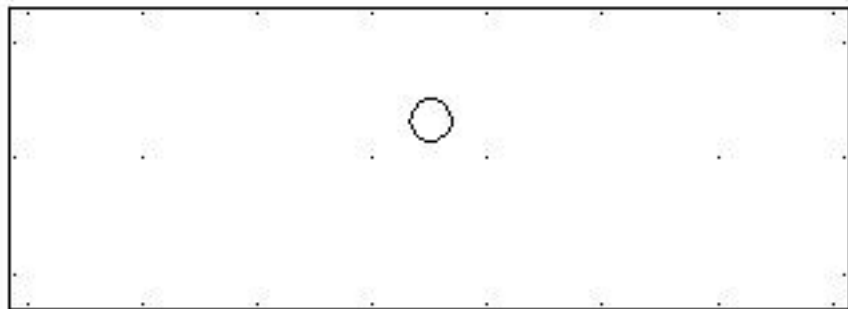


(I)
Back Panel - 1 pc

HARDWARE LIST



 (1) Wooden Dowel - 18 pcs



(2) M4x30mm Chipboard
Screw - 11 pcs



(3) M3.5x16mm PanlHead
Chipboard Screw - 26 pcs



(4) Camlock Screw - 19 pcs



(5) Camlock & Cap - 19 sets



 
(6) Leg Glide - 2 pcs

Note: EXTRA hardwares are included

ALEXIS OPEN ENTERTAINMENT UNIT


ASSEMBLY INSTRUCTION

Pg.3/4

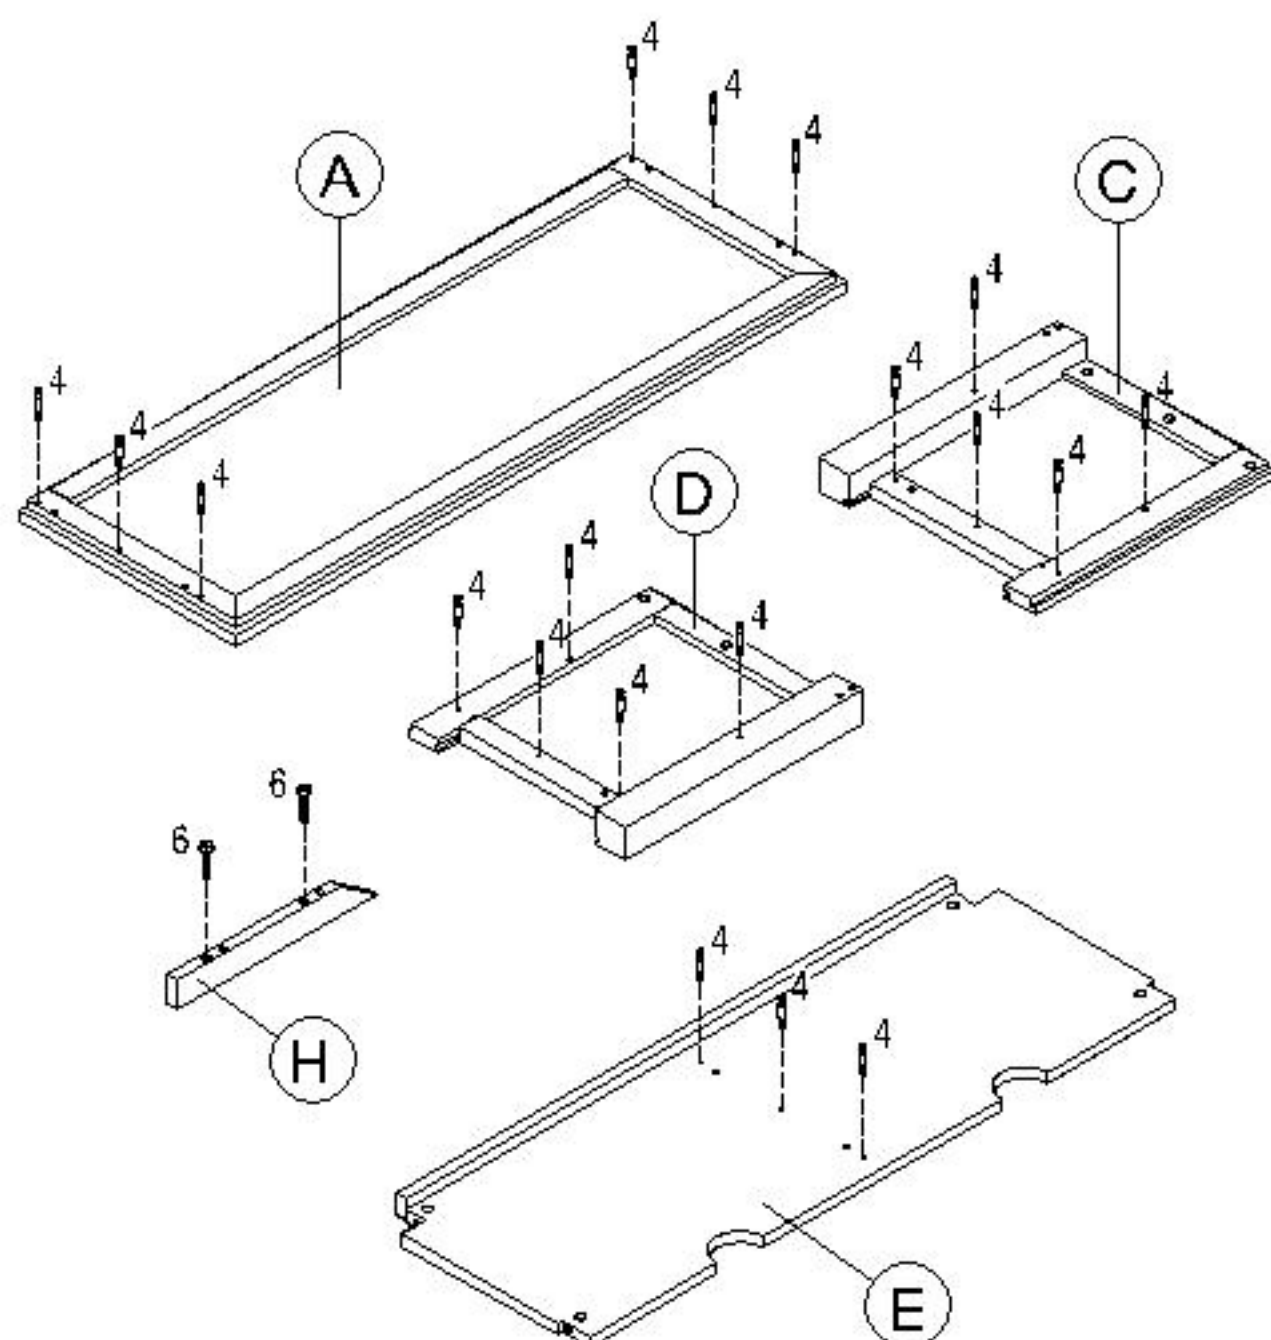


1

 - (i) Insert Camlock Screw (4) into holes on **TOP PANEL (A), SIDE PANELS (C,D) & FIXED SHELF (E)**. Fully tighten Camlock screw using Philips Head Screwdriver.
- (ii) Insert Leg Glide (6) into holes on **SUPPORT LEG (H)**.

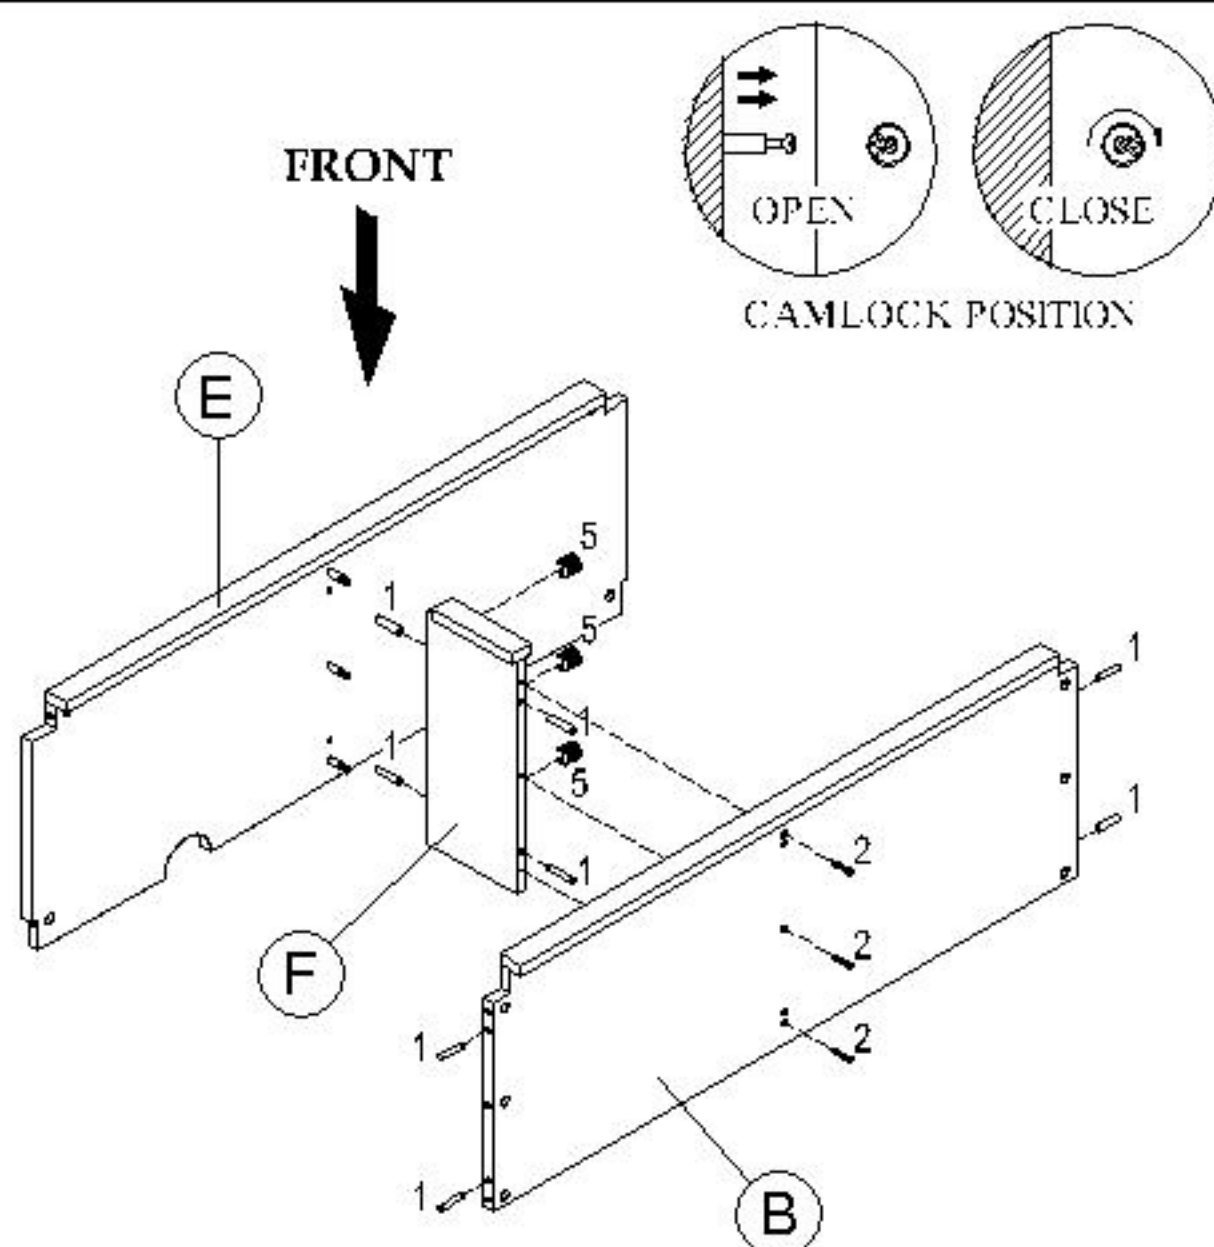


2

 - (i) Insert Wooden Dowel (1) into holes at both ends of **BOTTOM PANEL (B) & DIVISION (F)**.
- (ii) Insert Camlock (5) in open position to **DIVISION (F)**.
- (iii) Attach **DIVISION (F)** to **BOTTOM PANEL (B) & FIXED SHELF (E)** using guiding dowels.
- (iv) Tighten all Camlock (5) to close position using 4mm Hex Wrench.
- (v) Tighten Chipboard Screw (2) to **BOTTOM PANEL (B)** using Philips Head Screwdriver.

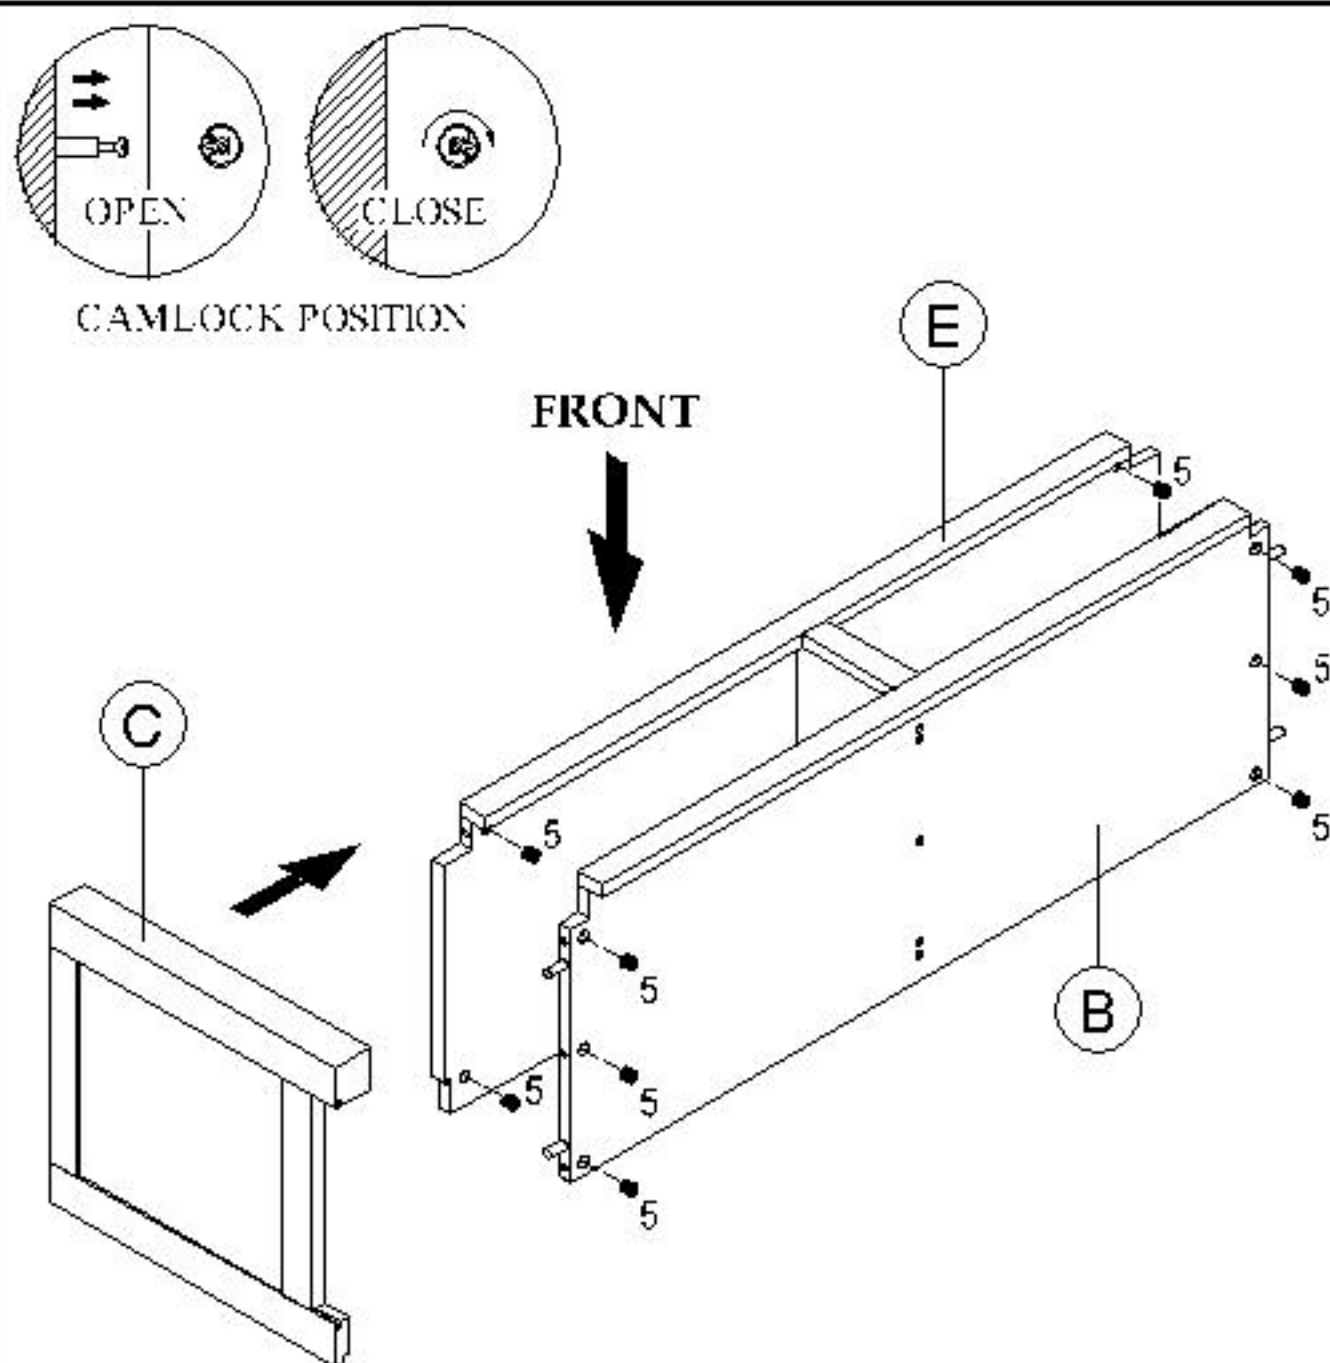

3

 - (i) Insert Camlock (5) in open position to **BOTTOM PANEL (B) & FIXED SHELF (E)**.
- (ii) Attach **BOTTOM PANEL (B) & FIXED SHELF (E)** to **SIDE PANEL - LEFT (C)** using guiding dowels.
- (iii) Tighten all Camlock (5) to close position using 4mm Hex Wrench.

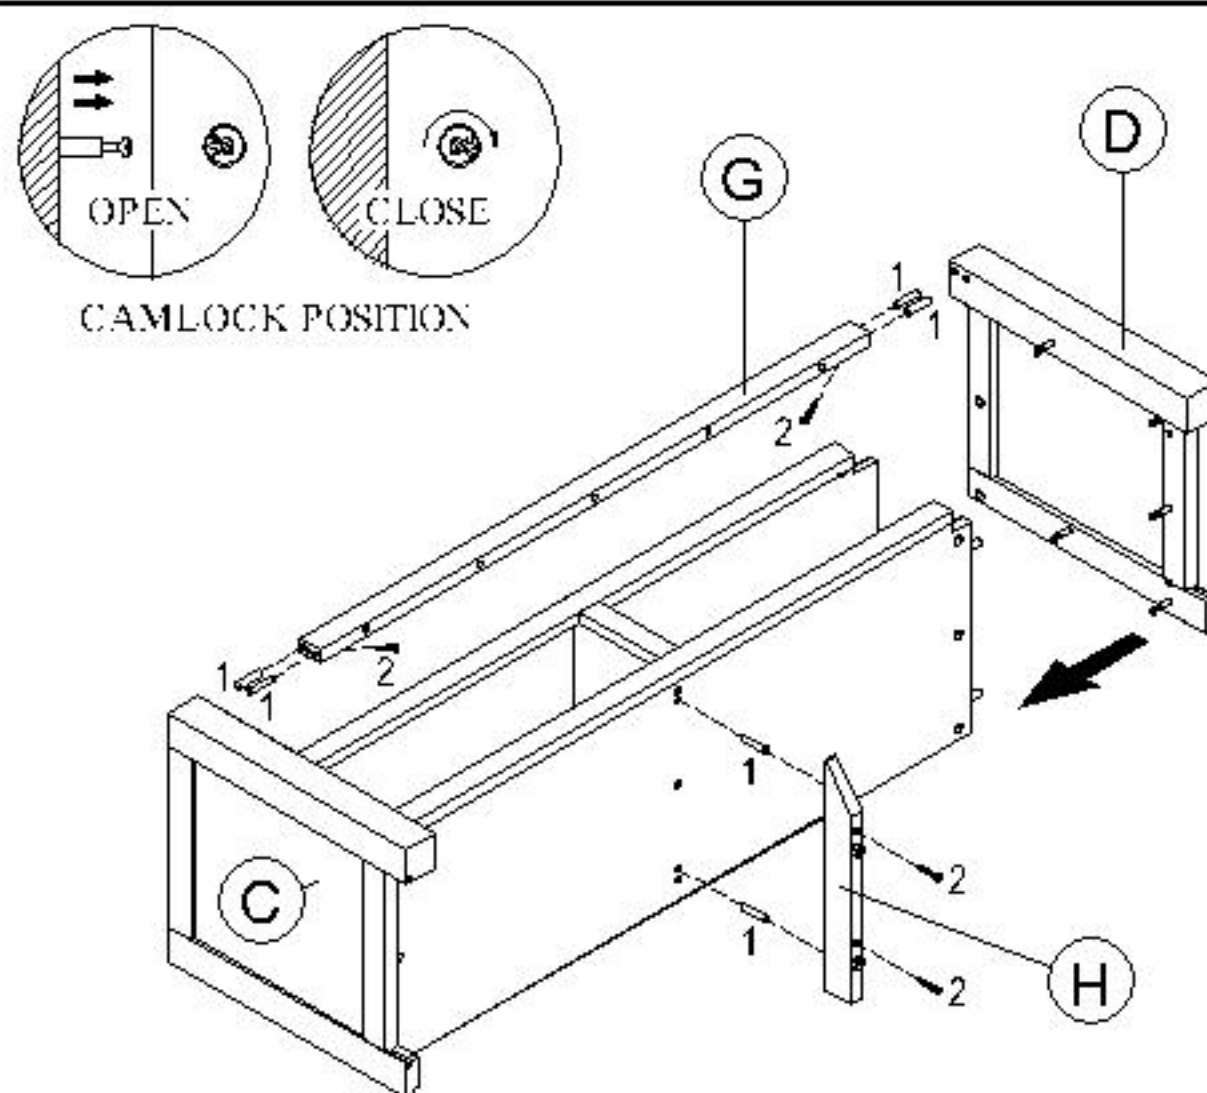


4

- (i) Insert Wooden Dowel (1) into holes at both ends of **TOP RAIL (G) & SUPPORT LEG (H)**.
- (ii) Attach **TOP RAIL (G)** to **SIDE PANEL - LEFT (C)** using guiding dowels.
- (iii) Attach **SIDE PANEL - RIGHT (D)** to assembled unit using guiding dowels.
- (iv) Attach **SUPPORT LEG (H)** to **BOTTOM PANEL (B)** using guiding dowels.
- (v) Tighten all Camlock (5) to close position using 4mm Hex Wrench.
- (vi) Tighten Chipboard Screw (2) to **TOP RAIL (G) & SUPPORT LEG (H)** using Philips Head Screwdriver.

ALEXIS OPEN ENTERTAINMENT UNIT


ASSEMBLY INSTRUCTION

 Pg.4/4

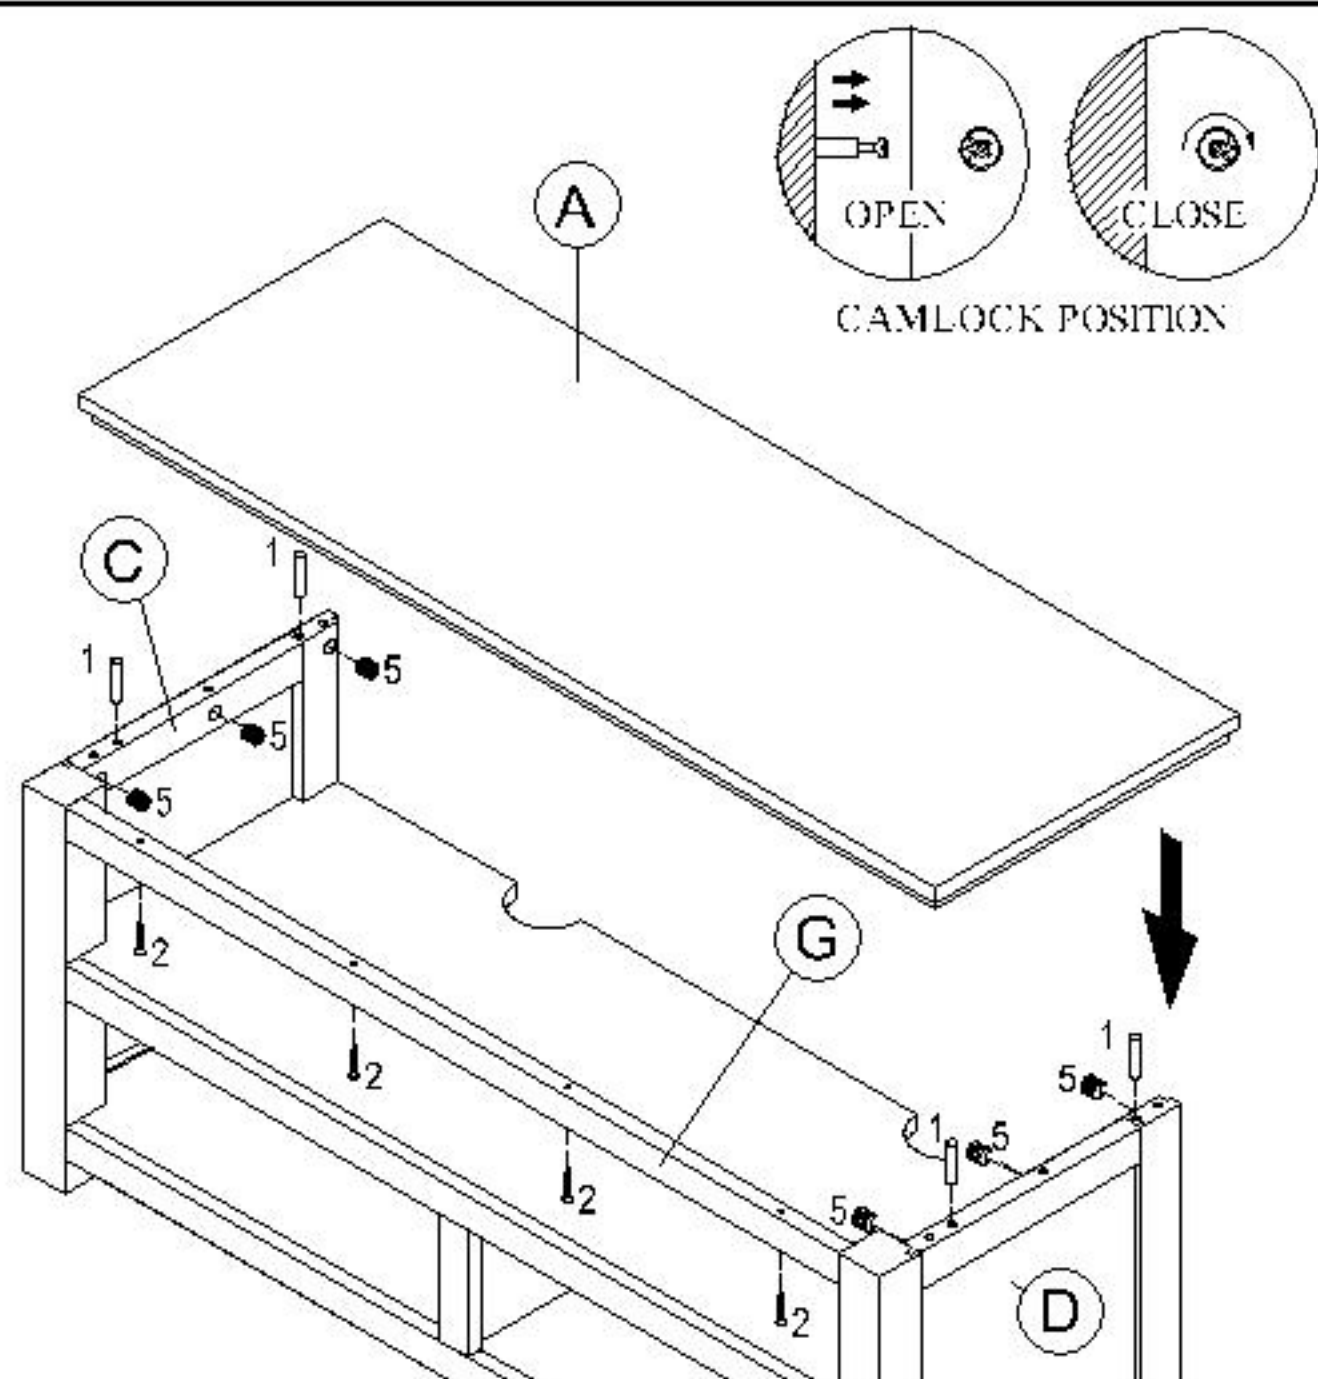


- (i) Insert Wooden Dowel (1) into holes at top of **SIDE PANELS (C,D)**.
- (ii) Insert Camlock (5) in open position to **SIDE PANELS (C,D)**.
- (iii) Attach **TOP PANEL (A)** to **SIDE PANELS (C,D)** using guiding dowels.
- (iv) Tighten all Camlock (5) to close position using 4mm Hex Wrench.
- (v) Tighten Chipboard Screw (3) to **TOP RAIL (G)** using Philips Head Screwdriver.

 5

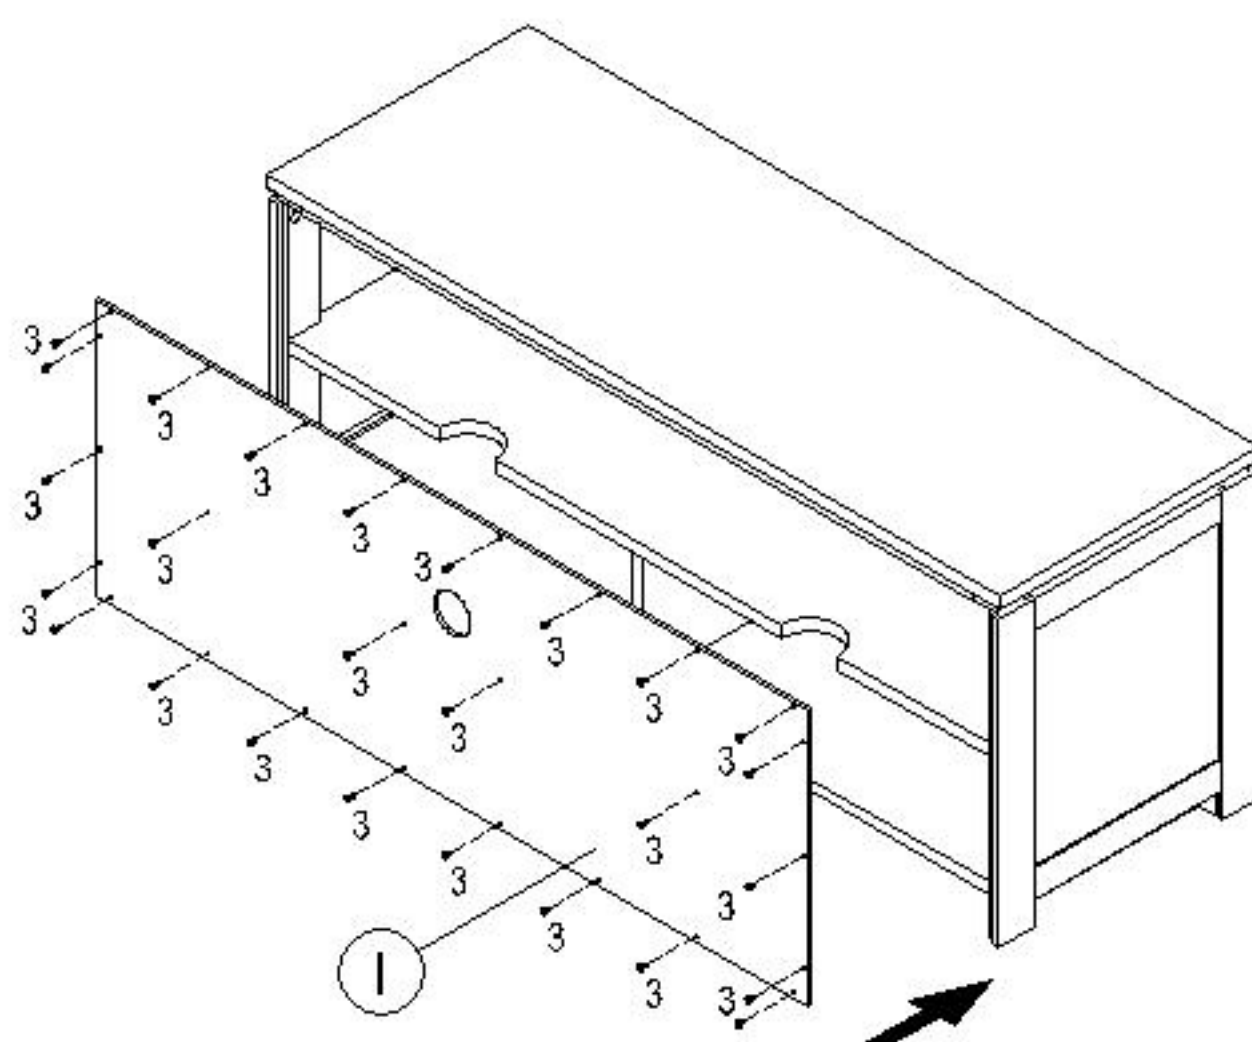

- Attach **BACK PANEL (I)** using Pan Head Chipboard Screw (3) with Philips Head Screwdriver.

 6

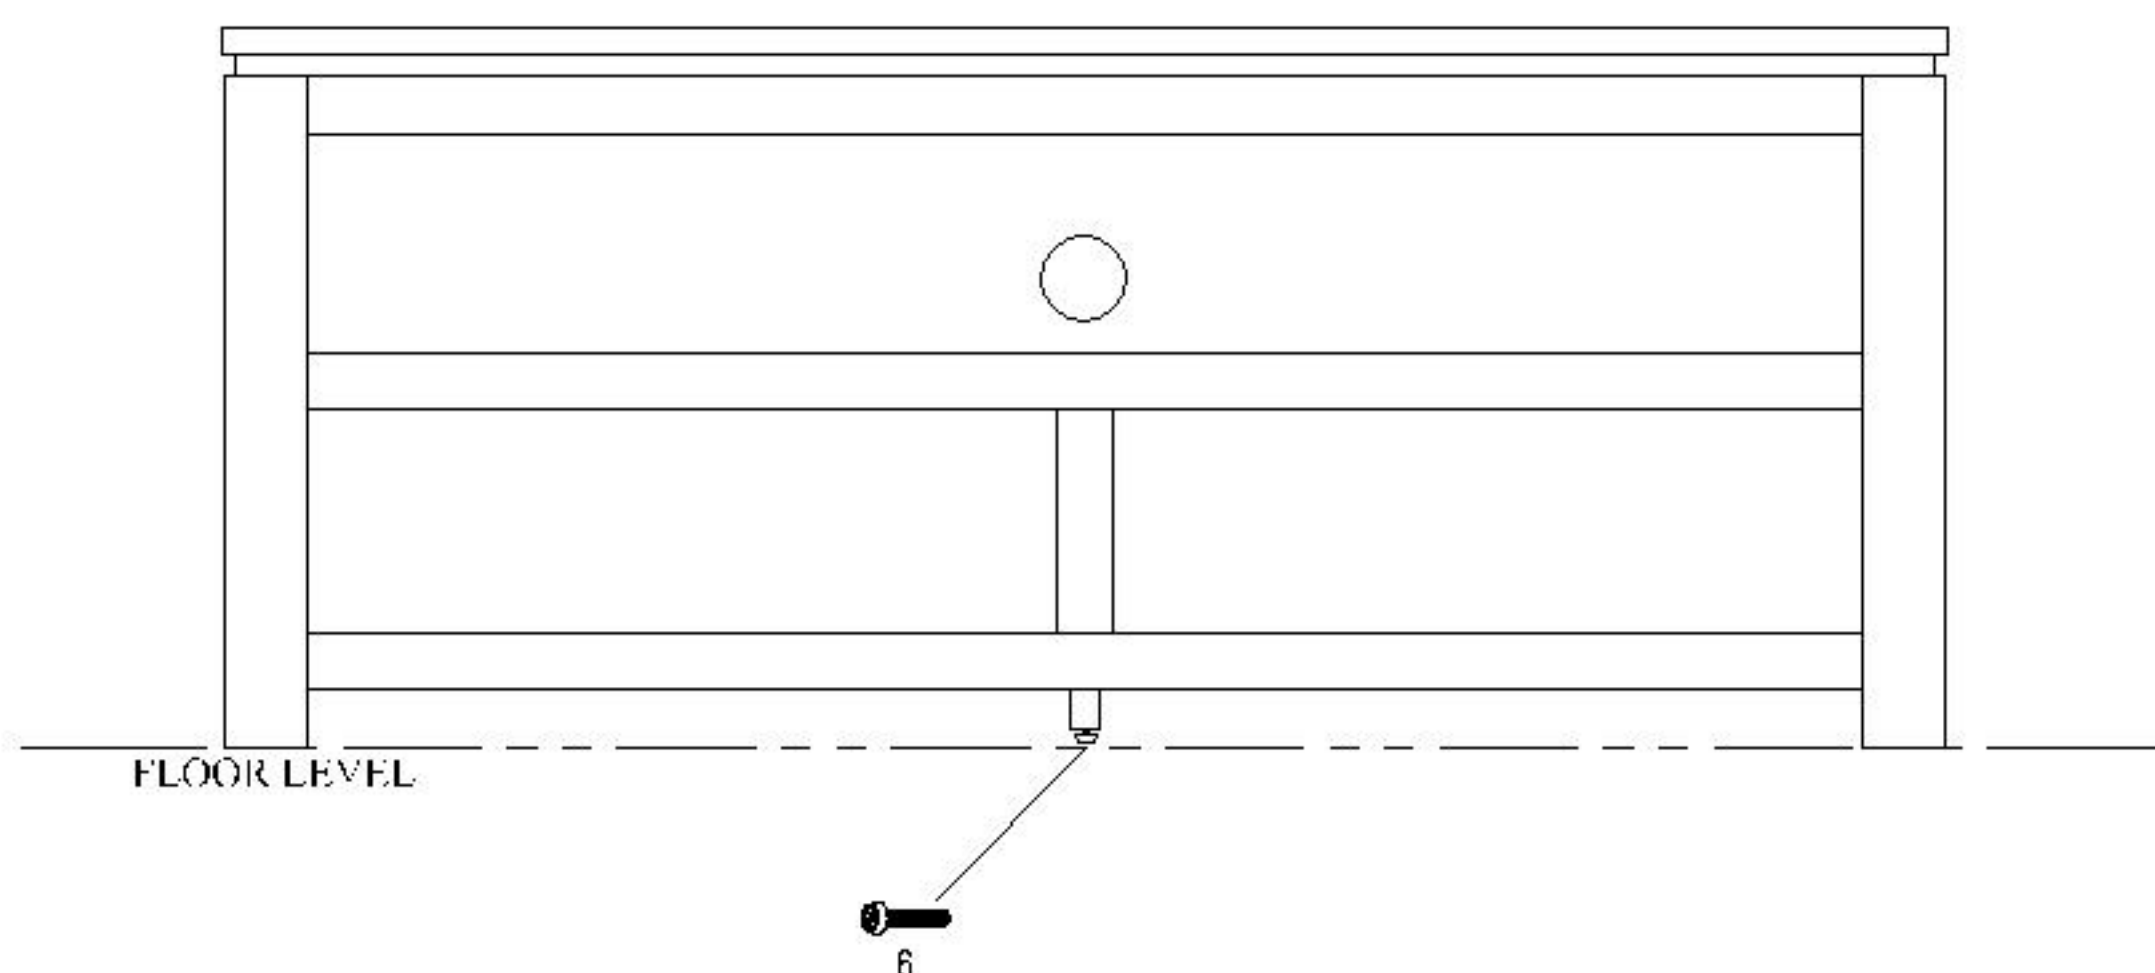

7

- Adjust Leg Glide (6) to level with Floor.