
Assembly Instructions

E1-Q153N SOLID R/W ENTERTAINMENT UNIT

PARTS LIST

PART NO	FIGURE	DESCRIPTION	QTY
E1-Q153N -01		Hardware Bag	1 pce
E1-Q153N -13		Тор	1 pce
E1-Q153N-07	€	Legs	4 pcs
E1-Q153N-22		Fixed Shelf	2 pcs

IMPORTANT NOTE : Please keep all hardware parts out of the reach of children.

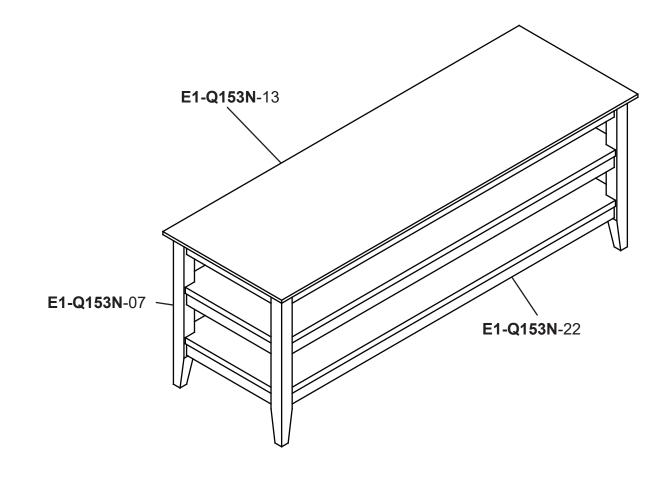

 
Assembly Instructions

E1-Q153N SOLID R/W ENTERTAINMENT UNIT

Reminders :

Two people are needed for assembly. Use only hardware supplied. Do not over tighten bolts. This item may require periodic tightening.


HARDWARE PART :



ASSEMBLY :


STEP 1

Turn the Top upside down on a protective surface such as carpet or other soft material.Place the three legs to the corner of the apron then insert the **Flat Washer**, **Lock Washer** and **JCBC Bolt** into pre-drilled holes on the corner block and tighten it by using the **Allen key** provided.

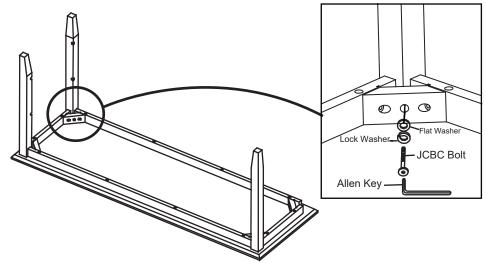

STEP 2

Insert the Fixed Shelf into the assembly legs as shown in the diagram, then install the fourth leg by use **Flat Washer**, **Lock Washer** and **JCBC Bolt** into pre-drilled holes on the corner block and tighten it by using the **Allen key** provided.

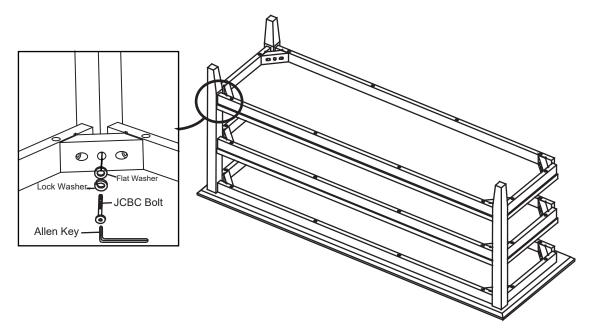


Assembly Instructions

E1-Q153N SOLID R/W ENTERTAINMENT UNIT

STEP 3

Then install the fourth leg by use **Flat Washer**, **Lock Washer** and **JCBC Bolt** into pre-drilled holes on the corner block and tighten it by using the **Allen key** provided.

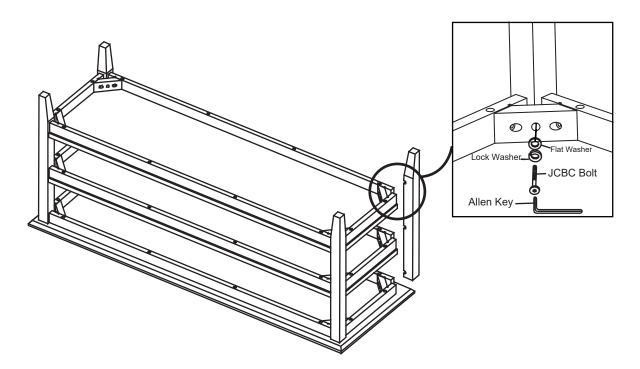

STEP 4

Check its balance and tighten all bolts to complete the assembly.

