
Assembly Instructions

T1-GL42R--O SOLID FIXTOP DINING TABLE

PARTS LIST

PART NO	FIGURE	DESCRIPTION	Q'TY
T1-GL42R0-01		Hardware Bag	1 Pc
T1-GL42RO-13		Table Top	1 Pc
T1-GL42RO-07		Leg	4 Pcs
T1-GL42RO-11		Shelf Panel	1 Pc
T1-GL42RO-18		Mounting Plate	2 Pcs

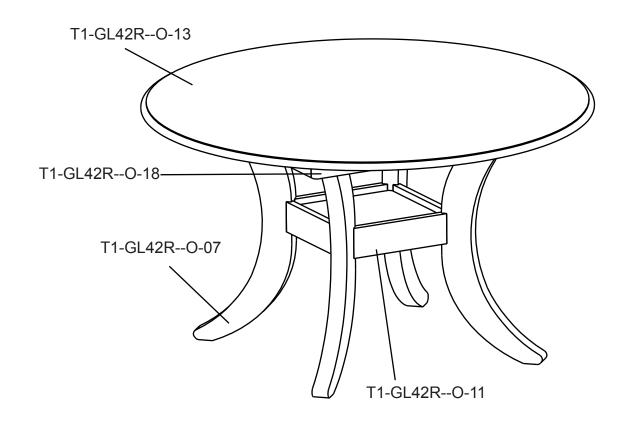

Assembly Instructions

SOLID FIXTOP DINING TABLE

HARDWARE PART:



















4 pcs

Lock Washer 12 pcs

Flat Washer 12 pcs

1 pce


JCBC Bolt 8 pcs

8 pcs

Lock Washer Flat Washer 8 pcs

Allen Key 1 pce

NOTE: THE UNIT SHOULD BE ASSEMBLED BY 2 OR MORE PEOPLE.

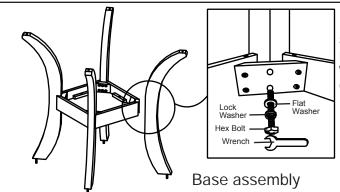


STEP 1


Place leg to the Shelf Panel and use Hex Bolt, Lock Washer, Flat Washer and Wrench to tighten each Leg. (Do not fully tighten yet.)

STEP 2


Turn the base Assembly upright. Attach Mounting Plate onto hanger bolts, insert Flat Washers, Lock Washers and Hex Nuts onto the hanger bolts. Fully tighten all Hex Nuts and Hex Bolt with the Wrench provided.

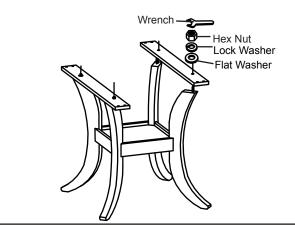

Place the Table Top upside down on a protective surface such as carpet. Align and Attach Base Assembly to the Table Top. Insert Flat Washer, Lock washer and JCBB Bolt through the pre-drilled hole of the the Mounting Plate into the pre-drilled hole of the base assembly. Then tighten the bolts by using Allen Key provided.

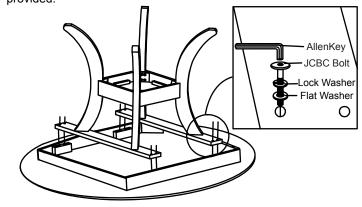

STEP 4

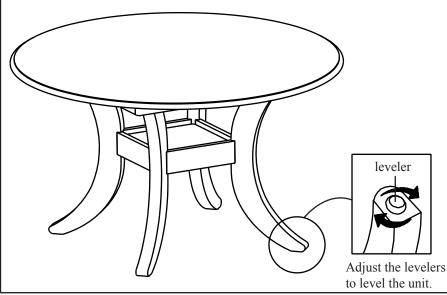

IMPORTANT NOTE:

- 1. Use only the hardware supplied.
- 2. Do not over-tighten bolts.
- 3. This item may require periodic tightening.

IMPORTANT NOTE:

~ Please keep all hardware out of the reach of children. Two or more people are needed for assembly.

CARE INSTRUCTION

- ~ Be sure to use the same type of polish consistenly. Your furniture will appear cloudy or streaky if oil based or wax based polishes are interchanged.
- Spray your furniture surface evenly. Wipe in a circular motion with a soft clean cloth.