WINNERS

ONLY INC.

ASSEMBLY INSTRUCTIONS

ITEM NO: T5-A53636--O

Thank you for purchasing this quality product . Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment .

Components List:

A. Table Top



1pc

B. Legs



4pcs

Hardware List:

1. Wrench



1pc

2. Hex-Nut



8pcs

3. Spring Washer



8pcs

4. Flat Washer



8pcs

Reminders

- 1. Use only the hardware supplied.
- 2. Do not over-tighten bolts.
- 3. This item may require periodic tightening.


<u>NOTE</u>: Hardware pack is located on back of table Top (A)


<u>Step1</u>: Unpack carton on a smooth clean non-abrasive surface and inventory parts.

Step2: Attach the 4 pcs legs (B) to table top (A) by using flat washer (4) & spring washer (3) and hex-nut (2).

Step3: Carefully turn table upright.

Assembly is now complete Thank you for choosing it

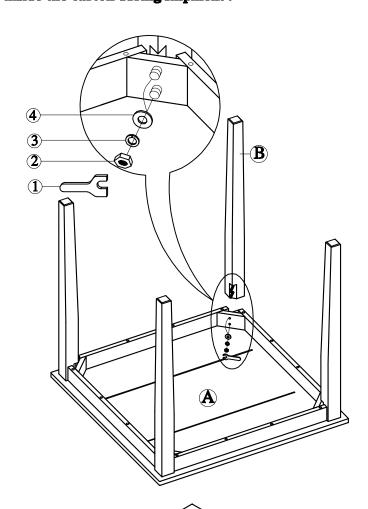

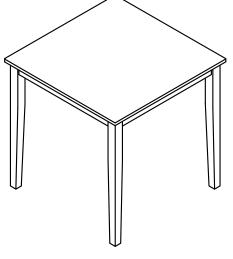

WINNERS

ONLY INC.

ASSEMBLY INSTRUCTIONS


ITEM NO: T5-A53636--O

Thank you for purchasing this quality product . Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment \cdot

"Hardware is attached underneath the seat bottom"

Components List:





B. Leg Frame



C. Stretcher



Hardware List:

- 1. Flat Washer φ12.5xφ1/4"
- (f) 4pcs
- 2. Spring Washer φ13xφ1/4"
- 4pcs
- 3. Bolt \$1/4"x57
- 1 Taxabananan 4pcs
- 4. Cross Plug φ1/4"xφ9x13
- **4pcs**
- 5. Wood Plug \$13x7
- 4pcs
- 6. Allen Key 4x57mm

8. Glue \$22x52mm

1pc

4pcs

- 7. Wood Screw \$8x45mm
- _______1so

Reminders

- 1. Use only the hardware supplied.
- 2. Once the chair is finished, level and tighten all the bolts.
- 3. Do not over-tighten bolts.
- 4. This item may require periodic tightening.

 \underline{NOTE} : Hardware pack is located underneath the seat board (A)

<u>Step1</u>: - Place the wood seat (A) upside down on floor with soft surface to prevent finish from scratching.

- Attach L/R leg frame (B) to the apron pre-attached on wood seat (A). Put the cross plug (4) into hole on apron. Insert bolt (3) with spring washer (2) flat washer (1) through the holes on L/R leg frame. (secure but do not tighten all bolts on this step).

Step2: - Insert side stretcher (with using glue (8) on stretcher dowel) into L/R leg frame (B). secure with wood screw (7) by using phillip head-screw driver (not provice).

- Tighten all bolts (3) with allen key (6) after leveling the chair.
- Using wood plug (5) fill onto the hote on L/R leg frame.

Assembly is now complete

Thank you for choosing this product.

