

ASSEMBLY INSTRUCTIONS





MODEL : AI-VL 139T --O

IMPORTANT NOTE :

* PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SUCH AD A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.


* BEFORE YOU BEING, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

HARDWARE LIST

A	JCBC SCREW M6 x 20mm		16PCS
B	SPRING WASHER M6		16PCS
C	FLAT WASHER M6		16PCS
D	ALLEN KEY M4		1PC

PART LIST

1	CABINET	1UNIT
2	CABINET LEG	4PCS

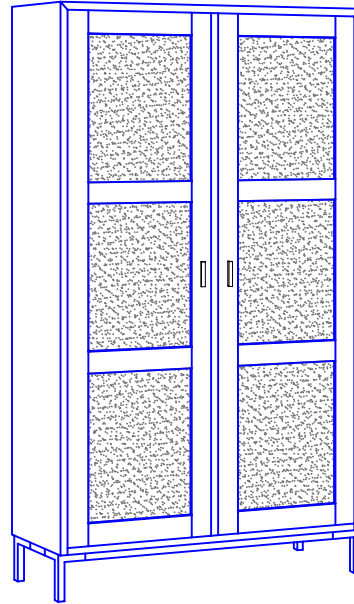

COMPLETED CABINET ASSEMBLY.

STEP 1

