

WINNERS

ONLY INC.





ASSEMBLY INSTRUCTIONS

ITEM NO : C1-GE106S - -O





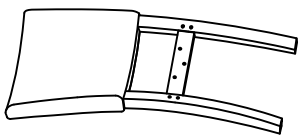

Thank you for purchasing this quality product . Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment .

"Hardware pack is stucked on the Front Leg box"

Components List :

NO	DESCRIPTION	SKETCH	QTY
A	Back Frame		1pc
B	Seat Frame with Cushion Seat		1pc
C	Front Leg		2pcs
D	Fabric Cover		1pc

Hardware List :

NO	DESCRIPTION	SIZE	SKETCH	QTY
1	Allen Key	58x23x4 mm		1pc
2	Short Bolt	1/4" x38 mm		3pcs
3	Long Bolt	1/4" x85 mm		4pcs
4	Middle Bolt	1/4" x57 mm		4pcs
5	Spring Washer	5/16" x Ø12		11pcs
6	Flat Washer	5/16" x Ø19		11pcs

Reminders

1. Use only the hardware supplied.
2. Once the chair is finished, level and tighten all the bolts.
3. Do not over-tighten bolts.
4. This item may require periodic tightening.

NOTE : Hardware pack is stucked on the Front Leg box


Step1: Attach the Front Legs (C) to Seat Frame with Cushion Seat (B) by using Flat Washer (6) & Spring Washer (5) and Middle Bolt (4).

Step2: Attach the Seat Frame with Cushion Seat (B) and Front Leg (C) to Back Frame (A) by using Flat Washer (6), Spring Washer (5) and Short Bolt, Long Bolt (2&3).



Step3: Place the Fabric Cover (D) under the Seat Frame (B)

Assembly is now complete

Thank you for purchasing this product.

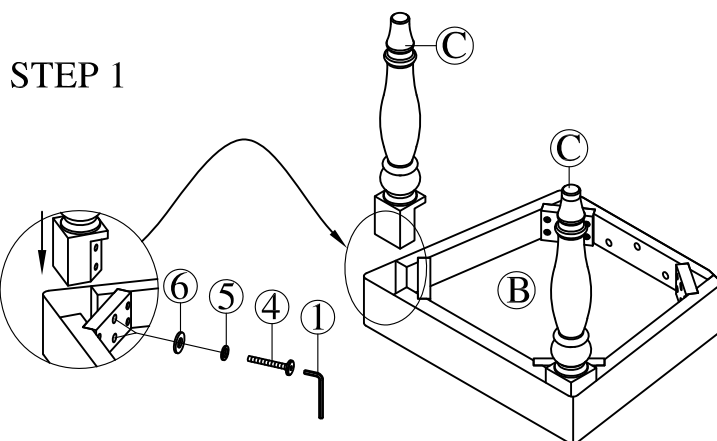

STEP 2

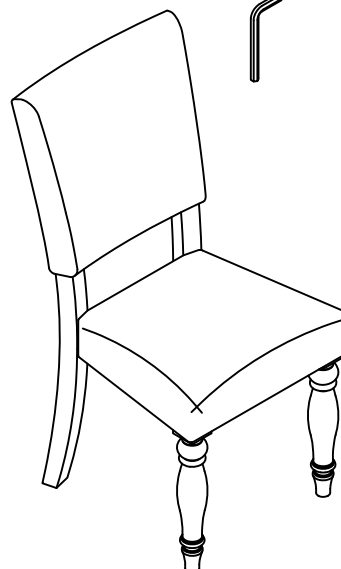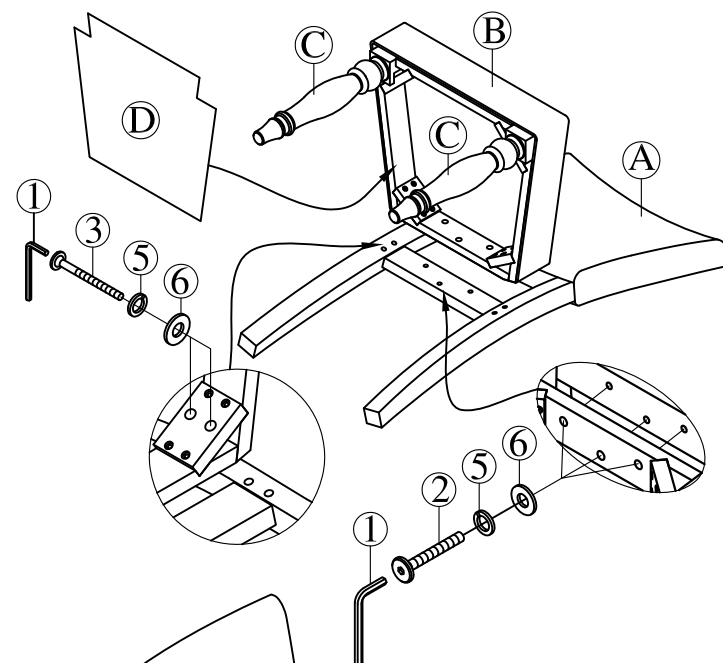

MADE IN VIETNAM