
Assembly Instructions

C1-GL102S--O
SPINDLE BACK WINDSOR SIDE CHAIR

PARTS LIST


PART NO	FIGURE	DESCRIPTION	Q'TY
C1-GL102S-01		Hardware Bag	1 Pce
C1-GL102S-02		Chair Back	1 Pce
C1-GL102S-05		Right Leg Assembly	1 Pce
C1-GL102S-06		Left Leg Assembly	1 Pce
C1-GL102S-11		Center Stretcher	1 Pce
C1-GL102S-14		Wood Plugs	2 Pcs

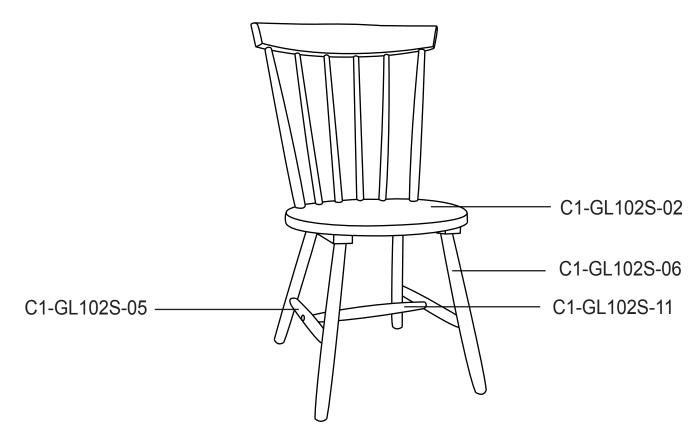

Assembly Instructions


C1-GL102S--O SPINDLE BACK WINDSOR SIDE CHAIR

HARDWARE PACK:



ASSEMBLY:

- 1. Insert the centre stretcher into the side stretcher. Make sure its JRN Nut holes face downward. Insert a JRN Nut into the holes and position it with a screw driver (Not provided). Insert the JCBC Bolt through the side stretcher into the end of centre stretcher. Use the provided Allen Key. As shown in the Fig.1. Do not fully tighten yet.
- 2. Attach the chair leg assembly to the seat board by aligning the leg supporter as shown in the Fig.2.
- 3. Insert JCBC Bolt with Lock Washer and Flat Washer through the leg supporter into the seat board then tighten the bolt with the Allen Key. (But Do Not fully tighten the bolt yet.)

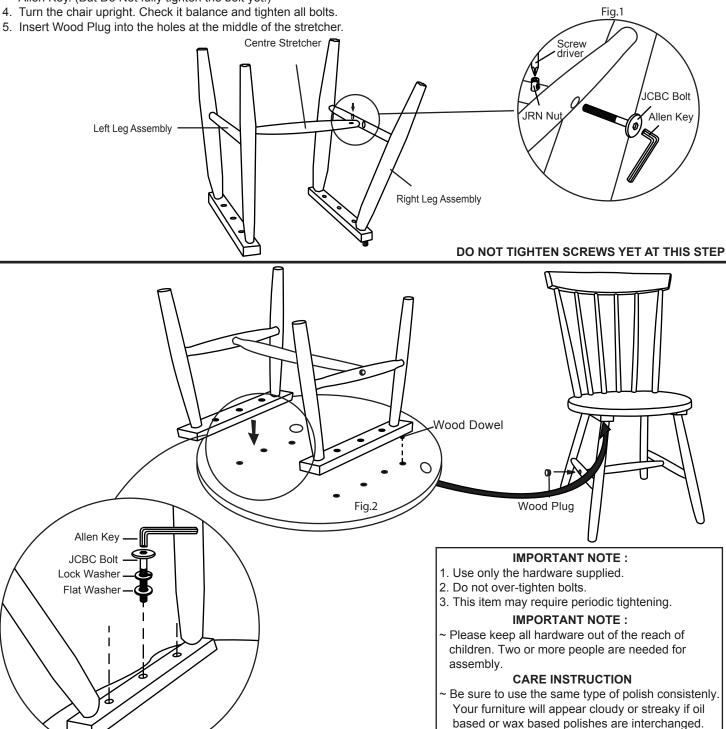

Spray your furniture surface evenly. Wipe in a circular motion with a soft clean cloth.