

WINNERS ONLY®





ASSEMBLY INSTRUCTIONS

PROD. NO : C1-UR106S - -G








Thank you for purchasing this quality product . Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment .

"Hardware is attached underneath the seat bottom"

Components List :

NO	DESCRIPTION	SKETCH	QTY
A	Back Frame		1pc
B	Cushion Seat		1pc
C	Seat Frame		1pc
D	Front Leg		2pcs

Hardware List :

NO	DESCRIPTION	SIZE	SKETCH	QTY
1	Wrench	12x75 mm		1pc
2	Allen Key	58x23x4 mm		1pc
3	Short Bolt	1/4" x38 mm		3pcs
4	Long Bolt	1/4" x75 mm		4pcs
5	Hex-Nut	5/16"		4pcs
6	Spring Washer	5/16" x Ø12		11pcs
7	Flat Washer	5/16" x Ø19		11pcs

Reminders

1. Use only the hardware supplied.
2. Once the chair is finished, level and tighten all the bolts.
3. Do not over-tighten bolts.
4. This item may require periodic tightening.

NOTE : Two or more people are needed for assembly.

Please keep all hardware parts out of the reach of children.


Step1: Attach the Seat Frame (C) with Cushion Seat (B) to Back Frame (A) by using Flat Washer (7), Spring Washer (6) and Short Bolt, Long Bolt (3&4).

Step2: Attach the Front Legs (D) to Seat Frame (C) by using Flat Washer (7) & Spring Washer (6) and Hex-Nut (5).


Assembly is now complete

Thank you for purchasing this product.

STEP 1

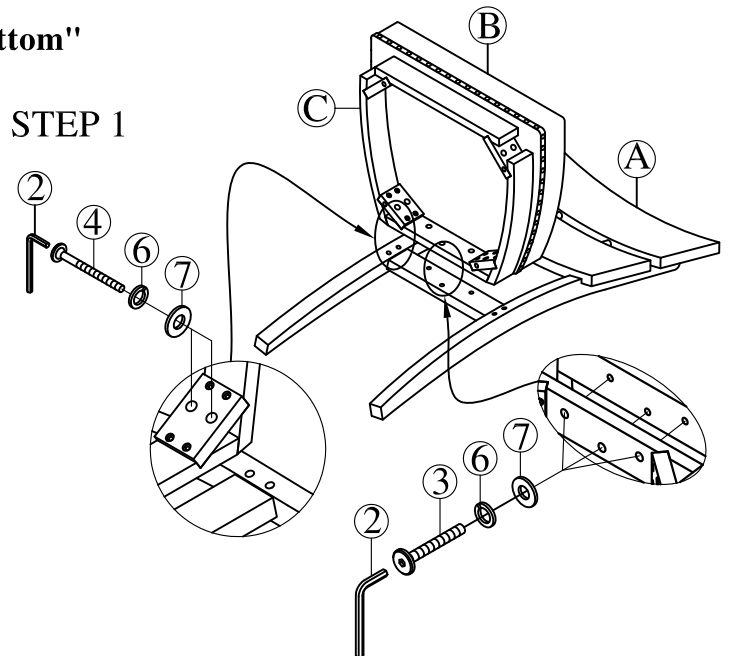

STEP 2

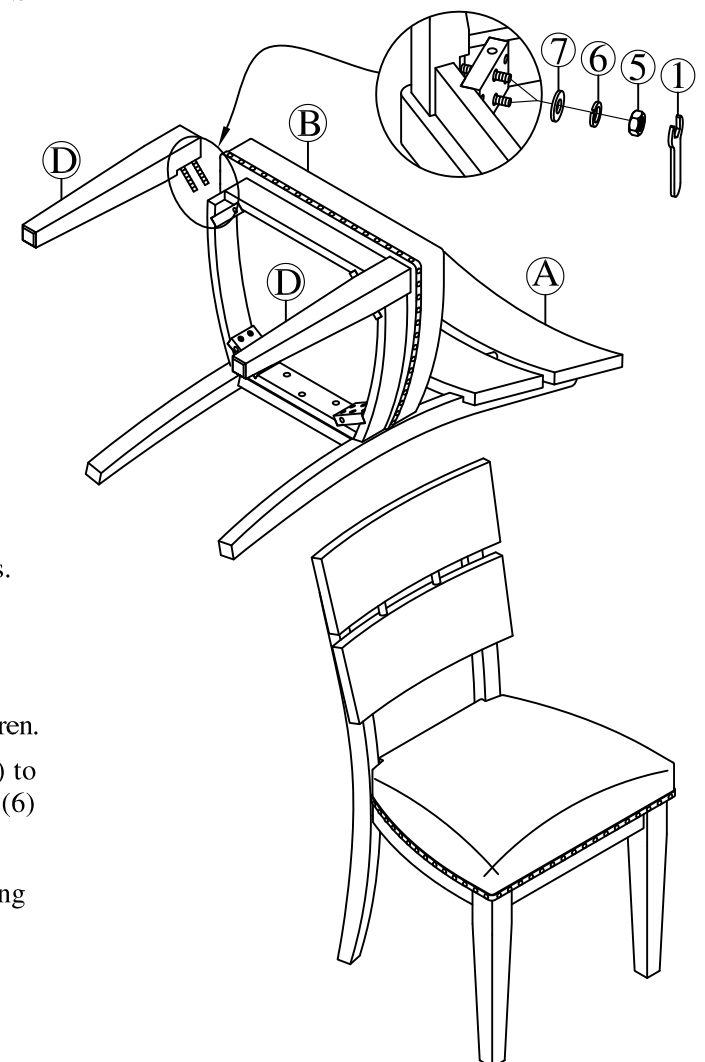

MADE IN VIETNAM