WINNERS ONLY®

ASSEMBLY INSTRUCTIONS

PROD.NO: T5-BW3636 - -O

Thank you for purchasing this quality product. Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment.

Components List:

A. Table Top



1pc

B. Legs



4pcs

Hardware List:

1. Wrench



1pc

2. Hex-Nut



8pcs

3. Spring Washer



8pcs

4. Flat Washer



8pcs

Reminders

- 1. Use only the hardware supplied.
- 2. Do not over-tighten bolts.
- 3. This item may require periodic tightening.


NOTE : Hardware pack is located on back of table Top (A)

<u>Step1</u>: Unpack carton on a smooth clean non-abrasive surface and inventory parts.

Step2: Attach the 4 pcs legs (B) to table top (A) by using flat washer (4) & spring washer (3) and hex-nut (2).

Step3: Carefully turn table upright.

Assembly is now complete Thank you for choosing it

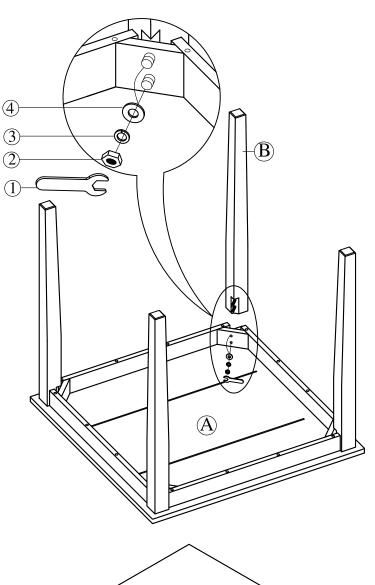

MADE IN VIETNAM

WINNERS ONLY®

ASSEMBLY INSTRUCTIONS

PROD.NO: TS-BW3636 - -O

Thank you for purchasing this quality product . Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment .

"Hardware is attached underneath the seat bottom"

Components List:

A. Seat Board



B. Leg Frame



C. Stretcher



Hardware List:

1. Flat Washer $\phi 12.5x \phi 1/4$ "



2. Spring Washer φ13xφ1/4"



3. Bolt \$\phi 1/4\"x57



4. Cross Plug $\phi 1/4$ "x $\phi 9x13$




5. Wood Plug φ13x7



6. Allen Key 4x57mm



7. Wood Screw φ8x45mm



8. Glue ϕ 22x52mm



Reminders

- 1. Use only the hardware supplied.
- 2. Once the chair is finished, level and tighten all the bolts.
- 3. Do not over-tighten bolts.
- 4. This item may require periodic tightening.

<u>NOTE</u>: Hardware pack is located underneath the seat board (A)

<u>Step1</u>: - Place the wood seat (A) upside down on floor with soft surface to prevent finish from scratching.

- Attach L/R leg frame (B) to the apron pre-attached on wood seat (A). Put the cross plug (4) into hole on apron. Insert bolt (3) with spring washer (2) flat washer (1) through the holes on L/R leg frame. (secure but do not tighten all bolts on this step).

<u>Step2</u>: - Insert side stretcher (with using glue (8) on stretcher dowel) into L/R leg frame (B). secure with wood screw (7) by using phillip head-screw driver (not provice).

- Tighten all bolts (3) with allen key (6) after leveling the chair.
- Using wood plug (5) fill onto the hote on L/R leg frame.

Assembly is now complete

Thank you for choosing this product.

